

BULLNOSE TREADS

- 1) With the tread upside down, position the curved riser block 25mm back from the nosing.
- 2) Trace the riser block to the underside of the tread. Drill several 4mm pilot holes through the tread, then glue and screw the riser block to the tread
- 3) Cut the 32mm risers to length and fix one to each side of the tread.

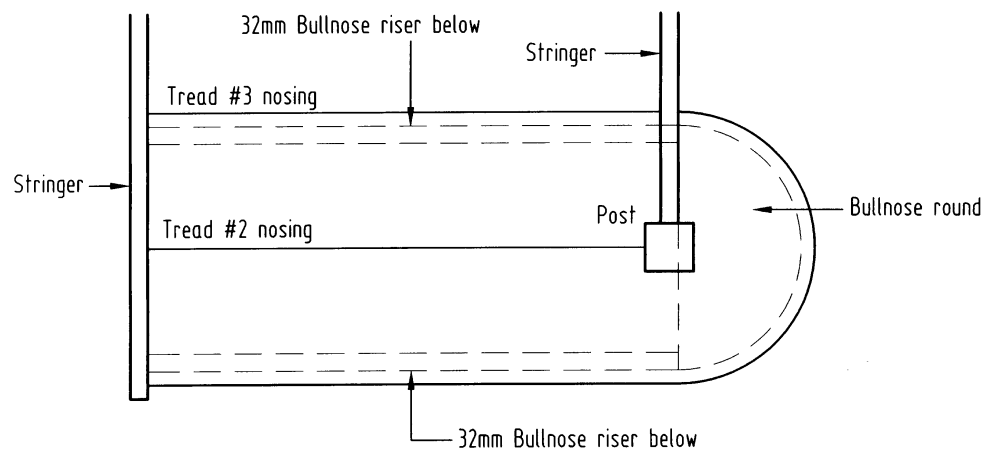


Figure 6
250mm Radius Bullnose Tread

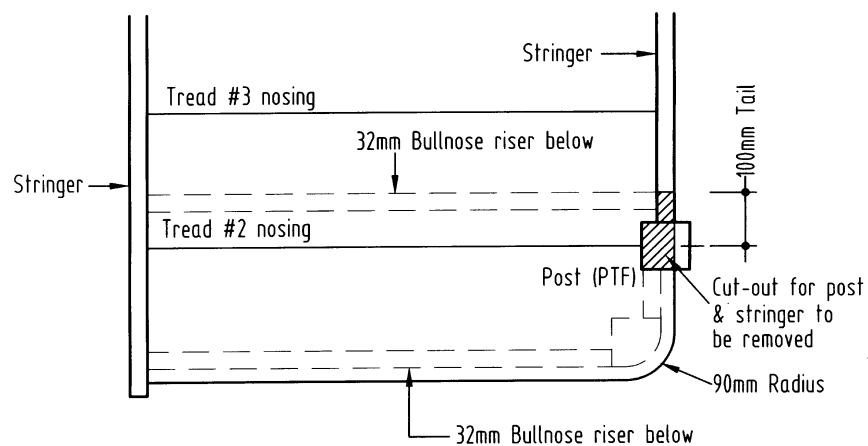


Figure 7
90mm Radius Bullnose Tread